Sattelhefter

Sattelhefter für Block- und Broschürenheftung

Der RM Sattelhefter ist ein manuelles Heftgerät für Block- oder Broschürenheftung (Sattelheftung) sowie Eckheftung durch verstellbaren Sattelhefttisch.

Arbeitsbreite: Sattelheftung: A4 quer (also bis DIN A3 Blattgröße),


Flachheftung: unbegrenzt

Heftkapazität: 60 Blatt Flachheftung bzw. 30 Blatt Sattelheftung

Heftstärke: 6 mm

für Heftklammern: 23/6, 23/8, 23/10, 24/6, 24/8, 24/10

 $Demo-Video: \verb| https://www.youtube.com/watch?v=aVAxbgIGUvY&feature=emb_logo| | logo | logo$

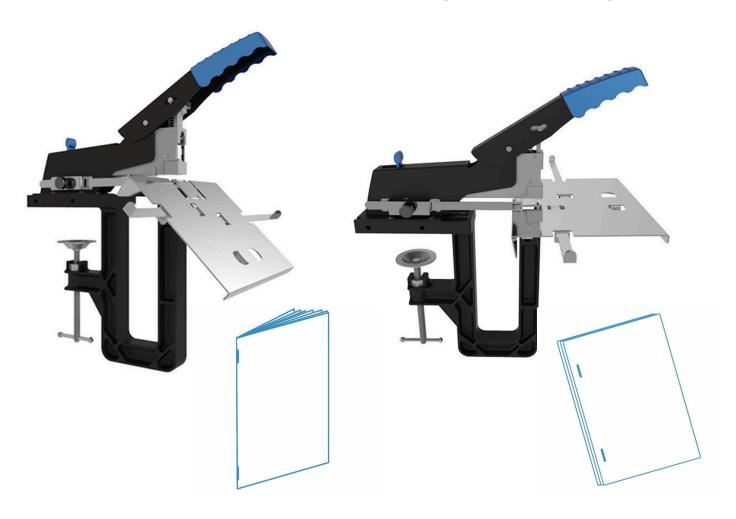


Specifications:

The Galaxy HU-GO 130 Clamp Stapler is perfect for most users as it is simple & to use and easy to set up. The HU-GO 130 is heavy duty and comes with a clamp attached to it to give the user the ability to position the stapler as they wish, The stapler is levered to make even 60 sheet stapling effortless. It can staple up to 60 sheets flat, side and corner stapling and 40 sheets saddle stapling for producing A4 and A5 booklets.

Model:	GALAXY HU-GO 130		
Designed for:	Small to Large Offices		
Paper Size:	SRA3 A3 A4 A5		
Staple Capacity:	Up to 60 sheets falt / up to 40 Sheets saddle - 80gsm		
Staple Types:	Saddle and Flat		
Staple Used:	24/6 20 sheets - 24/8 sheets 24/10 60 sheets		
Automatic:	No		
Feed Type:	Hand		
Side Guides:	Yes		
Average Speed:	2 Staples Booklet - 10 books per min		
Speed Controller:	No		
Staple heads:	1		
Special Features:	Easy to use. One finger stapling and fix to desk clamp		
Dimensions:	440 (W) X 550 (D) X 240 (H) mm		


Parts:

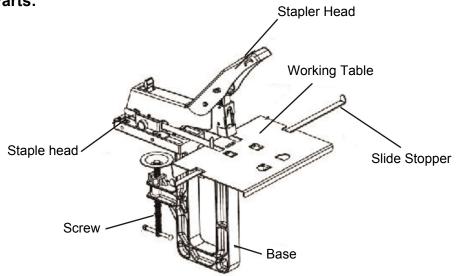

The UK's No.1 Print Finishing Supplier Galaxy

Paper Folding Machines




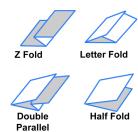

Fold


Pharmaceutical Folding Machines



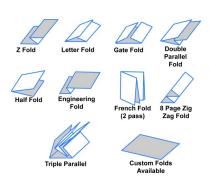

Folder Inserters






4

Troubleshooting:

Staple Jam:

Place a pencil in the directed place and pull down the handle

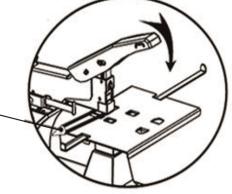

Staple too short



Staple too long



Safety Instructions:

- The Galaxy HU-GO 130 Clamp Stapler must be fixed to a stable and solid table.
- Keep the machine away from children and pets.
- Keep loose clothing, jewelery and long hair away from all moving parts.
- Do not remove covers. Covers enclose hazardous parts that should only be accessed by an authorised Service Representative.
- Read all instructions before attempting to operate the equipment.
- Use this equipment only for its intended purpose.

Staples Reference:

In the view of the thickness of paper, the following data is subject to the 70gsm plain paper and for reference only.


		†	
23/6 24/6	1/4"	6mm	20
23/8 24/8	5/6"	8mm	40
23/10 24/10	3/8"	10mm	60

CAUTION:

Only 23/6 - 23/10 and 24/6 - 24/10 staples are suitable for this machine. Using other staples for other models may cause damage to the machine. Unqualified staples will cause bad stapling quality or may result in the machine jamming and getting stuck.

Installation:

- 1. Unscrew the screws and pull it out.
- 2. Fix the working table to it, ensuring that it is level with the holes and screw it back into place, also ensuring that it is slotted into the metal strip.

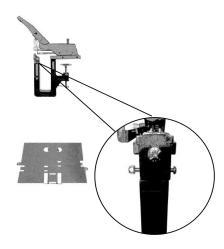


Adjusting the staple depth:


- 1. Twist the silver adjusting knob anti-clockwise to loosen and release the metal adjuster.
- 2. Depending on where you want to staple your paper, either push or pull the metal adjuster and twist the adjusting knob clockwise to tighten and secure your positioning.




Loading the Stapler:




Flat to Saddle




Saddle to Flat



Adjusting the side position



Adjusting the margin depth



Fitting machine to a table



7